



LGA

1851


CPU CONTACT FRAME INSTALLATION INSTRUCTIONS

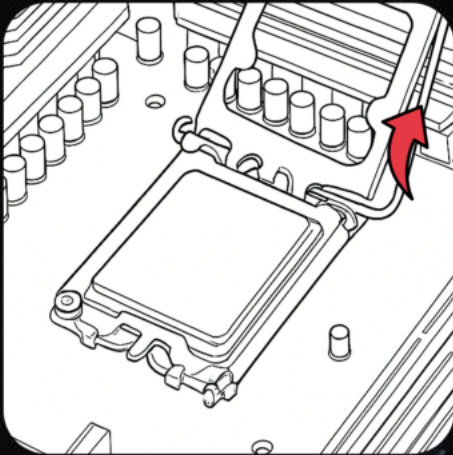


Open ILM
lift the ILM lever to unlock
(CPU remains in socket).

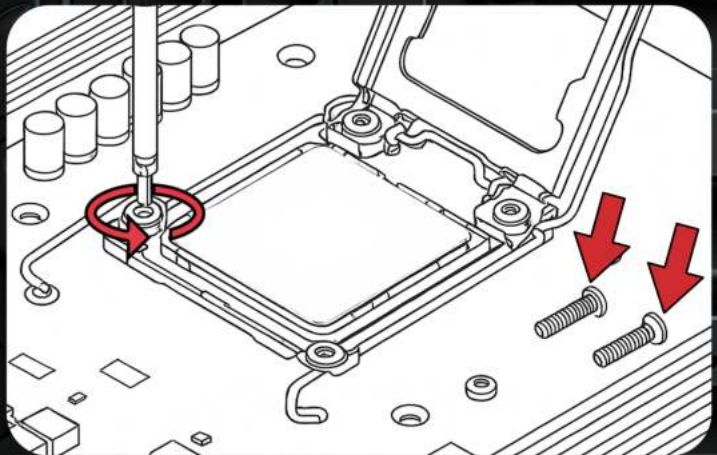


Remove ILM — loosen the 4 ILM screws
with the wrench and lift the ILM off;
keep the motherboard screws for reuse
(no screws included).

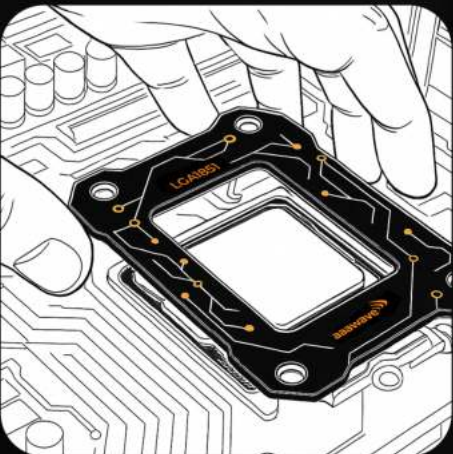

Seat Frame
align the Frame over the CPU
and backplate studs; lower gently.

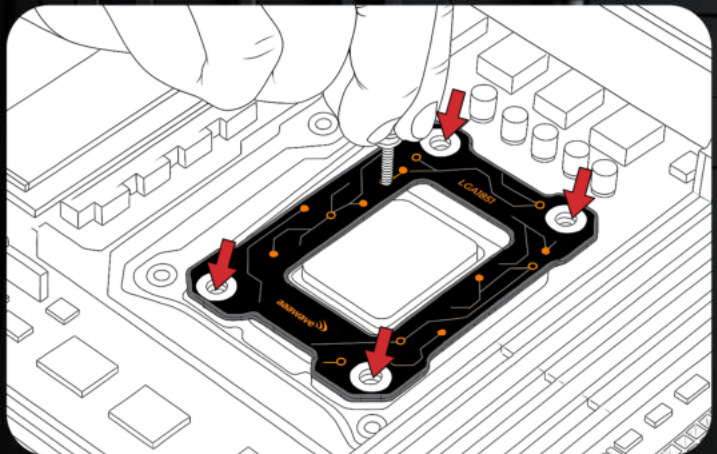

Hand-thread screws
thread each screw by hand until snug.

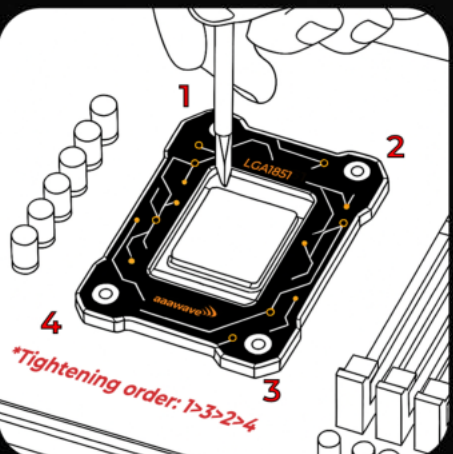

Tighten (star pattern)
use the wrench to tighten diagonally
until firm and the Frame sits flat;
do not overtighten.

TIPS & CAUTIONS

- Work in a static-free area to prevent component damage.
- Never force the frame into place — realignment is safer than pressure.
- If you feel resistance, recheck your alignment before proceeding.
- Do not overtighten the screws — it may stress or warp the socket area.
- Always move to the screw opposite (diagonally) from the one you just tightened.